



Durahub Extreme Bearing Protectors User Guide

1. The Durahub Extreme Bearing Protector has been installed by Easytow Trailers as original equipment using Valvoline Optimum Choice grease as a lubricant. Easytow warrant's the bearings for a period of six months if Valvoline grease only is used in the hub. The Extreme Bearing Protector is also designed to use oil or grease or a mixture of oil and grease as lubricants

The Durahub Extreme Bearing Protector has a flexible membrane which expands and contracts with various operating temperatures and pressures. For the system to operate properly, the wheel hub should be totally sealed. If there are any signs of contamination of the lubricant, or lubricant leaking, replace the rear seal immediately.

Useful Hints

1. Before towing inspect the clear lens for any condensation appearing on the inside. If condensation exists, replace the rear seals immediately. Check wheel bearings for corrosion and wear; replace if necessary.
2. During any two hourly rest stops, check the temperature of the wheel hubs for excessive heat by touching the hubs. If there is excessive heat, ensure that the brakes are not dragging, check wheel bearings for corrosion and wear, replace if necessary.
3. Routine Maintenance -Ensure that the wheel bearings are checked for corrosion and wear at least every 6 months. Ensure that the wheel bearings are repacked lubricated properly either with oil or grease and the correct preload is applied when installing the castle nut.